


CLEAN LINT SCREEN BEFORE EACH DRYER USE!

1 LIFT IT



2 COLLECT IT

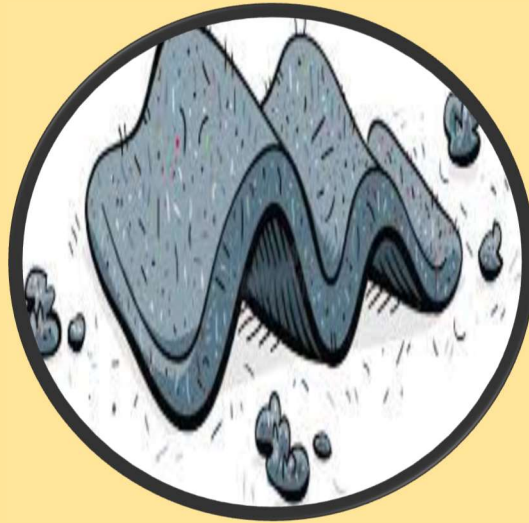

3 TOSS IT



REMINDER

REINSERT THE CLEANED LINT SCREEN!